

TERK Quick Start Guide

Check out setup videos at
www.TERK.com/Setup

1 Find the best location for your antenna.




TV antennas perform best when facing the direction of the broadcaster's tower.

For help finding your local broadcast towers, go to www.TERK.com

Antenna Placement Tips


- ✓ Avoid metal surfaces (like a metal stand).
- ✓ Move the antenna close to or in a window.
- ✓ Position the antenna as high as possible.

2 Raise the antenna's three elements.

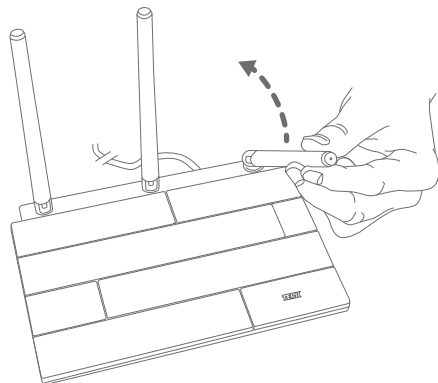

Raise the three elements to their upright position for best performance.


3 Connect the antenna to the provided amplifier

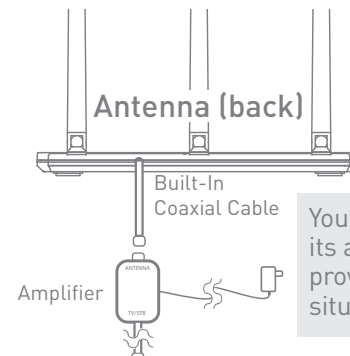

IMPORTANT: Don't plug the amplifier's power cord into a power outlet yet.

You can use this antenna with or without its amplifier. Try with the amplifier first—it provides the best performance in most situations.

4 Connect the amplifier to your TV or digital converter box.

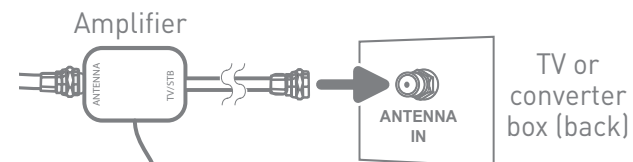

IMPORTANT: Make sure your TV is turned off.

5 Plug in the amplifier's power cord to a power outlet.

6 Scan for channels on your TV.

Most TVs have a channel scan option in their menu system, many times in a SETUP or CHANNEL menu under ANTENNA. For detailed instructions on performing a channel scan, see the owner's manual that came with your TV.

Feel free to move the Trinity antenna around to find its best possible position. Sometimes just a little bit of adjustment can make a difference!

STOP!

DO NOT RETURN this product to the store!
Please call our toll-free help line at **1-800-768-1969**
or visit **TERK.com**

TERK Guía de inicio rápido

Consulte los videos de instalación en
www.TERK.com/Setup

1 Encuentre la mejor ubicación para su antena.




Las antenas de TV tienen un mejor desempeño cuando miran en la dirección de la torre de radiodifusión. Si necesita ayuda para conocer la ubicación de las torres de radiodifusión, visite www.TERK.com

Consejos para la ubicación de la antena


- ✓ Evite las superficies de metal (tal como un soporte de metal).
- ✓ Coloque la antena en una o ventana o cerca de ella.
- ✓ Coloque la antena lo más alto posible.

2 Levante los tres elementos de la antena.

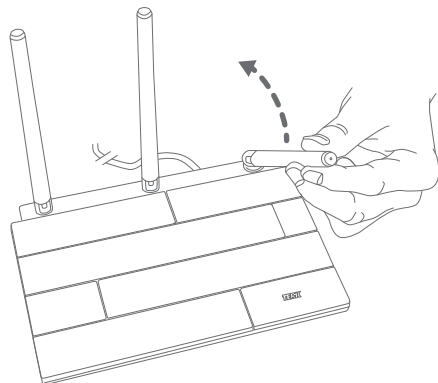

Para lograr un mejor desempeño levante los tres elementos a su posición completamente vertical.


3 Conecte la antena al amplificador suministrado.

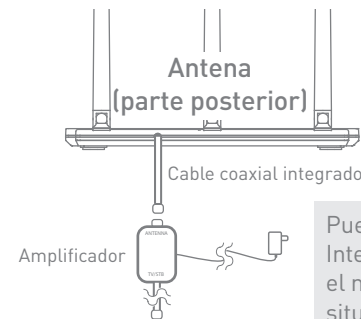

IMPORTANTE: No enchufe todavía el cordón de alimentación del amplificador en un tomacorriente.

Puede usar esta antena con o sin el amplificador. Intente primero con el amplificador—proporciona el mejor desempeño en la mayoría de las situaciones.

4 Conecte el amplificador a su televisor o al convertidor digital.

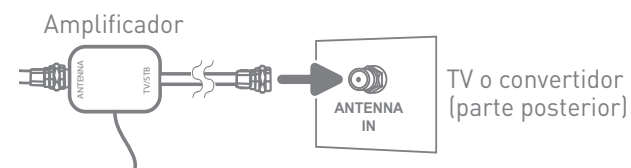

IMPORTANTE: Asegúrese que el TV esté apagado.

5 Enchufe el cordón de alimentación del amplificador en el tomacorriente.

6 Busque canales en su TV.

La mayoría de televisores tienen una opción para buscar canales en el sistema de menús, frecuentemente como un menú de configuración o lista de canales debajo de la antena. Para obtener instrucciones detalladas sobre cómo llevar a cabo una búsqueda de canales, consulte el manual del propietario incluido con el TV.

Mueva con toda libertad la antena Trinity para encontrar la mejor posición posible. ¡Algunas veces un ajuste pequeño hace una gran diferencia!

¡ALTO!

¡NO devuelva este producto a la tienda!
Llame a nuestra línea de ayuda libre de cargo por el **1-800-768-1969** o visite **TERK.com**